

OWNER'S GUIDE &

INSTALLATION INSTRUCTIONS

Thru-Hull, Shorty™ with Valve Speed & Temperature Sensor

Models: S300, ST300

Record the information found on the cable tag for future reference.

Part No.: _____ Date _____

17-274-01 rev. 04 04/14/11

Follow the precautions below for optimal product performance and to reduce the risk of property damage, personal injury, and/or death.

WARNING: Always wear safety goggles and a dust mask when installing.

WARNING: The valve is not a watertight seal! Always use the insert or the blanking plug secured with the safety wire for a watertight seal.

WARNING: The O-rings must be intact and well lubricated to make a watertight seal.

WARNING: Always attach the safety wire to prevent the sensor insert or blanking plug from backing out in the unlikely event that the cap nut fails or is screwed on incorrectly.


WARNING: Immediately check for leaks when the boat is placed in the water. Do not leave the boat unchecked for more than three hours. Even a small leak may allow considerable water to accumulate.

CAUTION: Never use a fairing with a plastic housing; the protruding sensor would be vulnerable to damage from impact.


CAUTION: Never pull, carry, or hold the sensor by its cable; this may sever internal connections.

CAUTION: Never use solvents. Cleaners, fuel, sealants, paint, and other products may contain strong solvents, such as acetone, which attack many plastics, greatly reducing their strength.

IMPORTANT: Please read the instructions completely before proceeding with the installation. These instructions supersede any other instructions in your instrument manual if they differ.

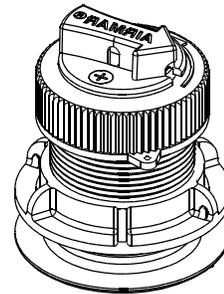

Low Profile P371

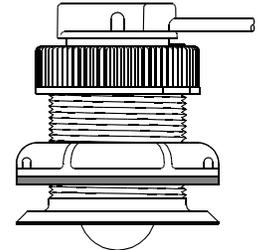

Flush P398

Pretest

Connect the sensor to the instrument and spin the paddlewheel. Check for a speed reading (and the approximate air temperature if applicable). If there is no reading(s), check all the connections and repeat the test. If there is still no reading(s) or it is inaccurate, return the product to the place of purchase.

Tools & Materials

Safety goggles

Dust mask

Water based anti-fouling paint (**mandatory in salt water**)

Electric drill with minimum 10mm (3/8") chuck capacity

Drill bit 3mm or 1/8"

Hole saw 51 mm or 2"

Countersink tool (installing a P398 flush housing)

Sandpaper

Mild household detergent or weak solvent (such as alcohol)

File (installation in a metal hull)

Marine sealant (suitable for below waterline)

Additional washer [aluminum hull less than 6mm (1/4") thick]

Grommet(s) (some installations)

Cable ties

Installation in a cored fiberglass hull (see page 3):

Hole saw for hull interior 60mm or 2-3/8"

Fiberglass cloth and resin

or Cylinder, wax, tape, and casting epoxy

Applications

- Recommended for fiberglass or metal hull only
- Never install a plastic thru-hull housing in a wood hull, since swelling of the wood can possibly fracture the plastic.
- Low profile P371 recommended for cruising sailboats and planing hull powerboats
- Flush P398 recommended for racing sailboats and high-speed powerboats
- Minimum headroom required: 153mm (6")
- Accommodates hull thickness:

Minimum	6mm (1/4")
Maximum	25mm (1")

Mounting Location

CAUTION: Do not mount near water intake or discharge openings; or behind strakes, fittings or hull irregularities that may disturb the water flow.

CAUTION: Never mount the speed sensor directly ahead of a depth transducer, since turbulence generated by the paddlewheel's rotation will adversely affect the transducer's performance, especially at high speeds. Mount side by side.

Turbulence-free water must flow under the paddlewheel at all boat speeds. Choose an accessible spot inside the vessel. Allow a minimum of 153mm (6") of headroom for the height of the housing, tightening the nuts, and removing the insert.

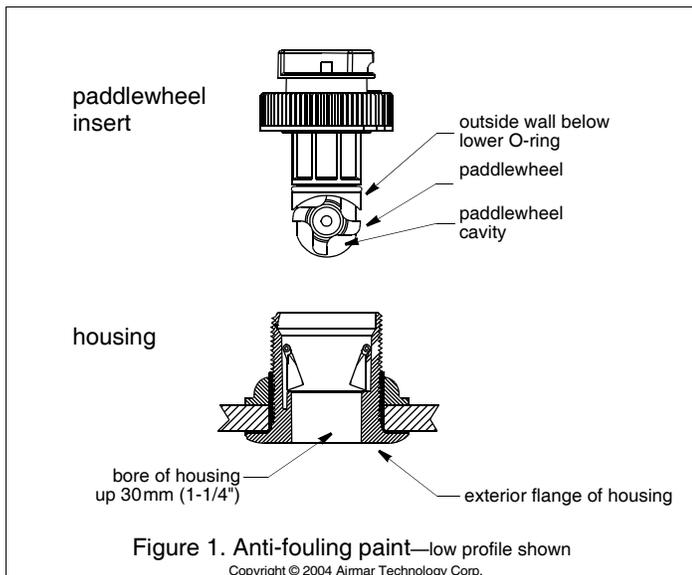


Figure 1. Anti-fouling paint—low profile shown
Copyright © 2004 Airmar Technology Corp.

- **Fin keel sailboats**—Mount on or near the centerline and forward of the fin keel 300–600mm (1–2’).
- **Full keel sailboats**—Mount amidships and away from the keel at the point of minimum deadrise angle.
- **Displacement hull powerboats**—Locate amidships near the centerline.
- **Planing hull powerboats**—Mount well aft to insure that the sensor is in contact with the water at high speeds.

Anti-fouling Paint

Aquatic growth can accumulate rapidly on the sensor’s surface reducing performance within weeks. Surfaces exposed to salt water *must* be coated with anti-fouling paint. *Use water-based anti-fouling paint only.* Never use ketone-based paint, since ketones can attack many types of plastic possibly damaging the sensor.

It is easier to apply anti-fouling paint before installing the sensor, but allow sufficient drying time. Reapply paint every 6 months or at the beginning of each boating season. Paint the following surfaces (see Figure 1):

- Outside wall of the paddlewheel insert below the lower O-ring
- Paddlewheel cavity
- Paddlewheel
- Bore of the housing up 30mm (1-1/4")
- Exterior flange of the housing
- Blanking plug below the lower O-ring including the exposed end

Installation

Cored fiberglass hull—Follow separate instructions on page 3.

Hole Drilling

1. Drill a 3mm or 1/8" pilot hole from inside the hull. If there is a rib, strut, or other hull irregularity near the selected mounting location, drill from the outside.
2. Using a 51 mm or 2" hole saw, cut a hole perpendicular to the hull from outside the boat.

P398—This flush model requires countersinking the housing to create a “seat” in the hull.

3. Sand and clean the area around the hole, inside and outside, to ensure that the sealant will adhere properly to the hull. If there is any petroleum residue inside the hull, remove it with either mild household detergent or a weak solvent (alcohol) before sanding.

Metal hull—Remove all burrs with a file and sandpaper.

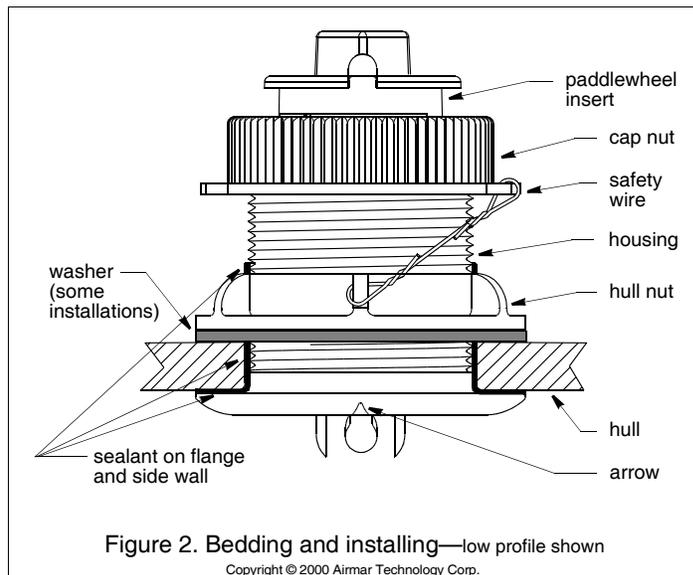


Figure 2. Bedding and installing—low profile shown
Copyright © 2000 Airmar Technology Corp.

Bedding

Apply a 2mm (1/16") thick layer of marine sealant around the flange of the housing that contacts the hull and up the sidewall of the housing. The sealant must extend 6mm (1/4") higher than the combined thickness of the hull, any washer(s), and the hull nut (see Figure 2). This will ensure there is sealant in the threads to seal the hull and hold the hull nut securely in place.

Installing

1. From outside the hull, push the housing into the mounting hole using a twisting motion to squeeze out excess sealant. *Align the arrow on the flange of the housing pointing forward toward the bow* (see Figure 2). If the sensor is not installed on the centerline of the boat, angle the housing slightly toward the centerline to align it with the water flow.

2. From inside the hull, slide any washer(s) onto the housing.

NOTE: Some installations do not have a washer.

Aluminum hull less than 6mm (1/4") thick—Use an additional rubber, plastic, or fiberglass washer. Never use wood, since it will swell, possibly fracturing the plastic housing. Never use bronze, since electrolytic corrosion will occur.

3. Screw the hull nut in place, being sure the notch on the upper rim of the housing is still positioned forward toward the bow. Do

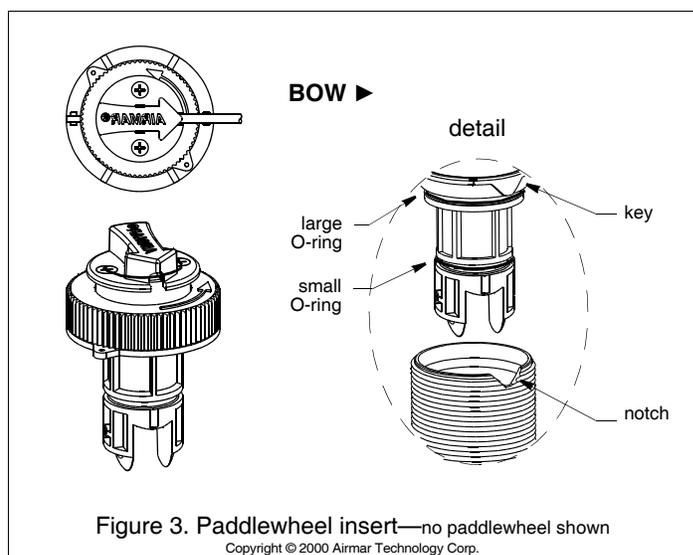


Figure 3. Paddlewheel insert—no paddlewheel shown
Copyright © 2000 Airmar Technology Corp.

not clamp tightly on the wrenching flats, possibly causing the housing to fracture. **Hand tighten** only. Do not over tighten.

Cored fiberglass hull—Do not over tighten, crushing the hull.

- Remove any excess sealant on the outside of the hull to ensure smooth water flow under the paddlewheel.
 - After the sealant cures, inspect the O-rings on the paddlewheel insert (replace if necessary) and lubricate them with the silicone lubricant supplied (see Figure 3). The O-rings must be intact and well lubricated to make a watertight seal.
 - Slide the paddlewheel insert into the housing with the *arrow on the top pointing forward toward the bow*. Seat it into place with a pushing twisting motion until the key fits into the notch. The arrow on the top of the insert, the notch, and the arrow on the flange of the housing will all be aligned. Be careful not to rotate the housing and disturb the sealant.
- Screw the cap nut several turns, then check that the insert's arrow is still facing forward toward the bow. Continue to tighten the cap nut. **Hand tighten** only. Do not over tighten.
- Always attach the safety wire to prevent the insert from backing out in the unlikely event that the cap nut fails or is screwed on incorrectly. Attach the safety wire to one eye in the hull nut. Lead the wire in a counterclockwise direction and thread it through one eye in the cap nut. Twist the end securely to the wire (see Figure 2).

Cable Routing & Connecting

CAUTION: If your sensor came with a connector, do not remove it to ease cable routing. If the cable must be cut and spliced, use Airmar's splash-proof Junction Box No. 33-035 and follow the instructions provided. Removing the waterproof connector or cutting the cable, except when using a watertight junction box, will void the sensor's warranty.

- Route the cable to the instrument, being careful not to tear the cable jacket when passing it through the bulkhead(s) and other parts of the boat. Use grommets to prevent chafing. To reduce electrical interference, separate the sensor cable from other electrical wiring and the engine. Coil any excess cable and secure it in place with cable ties to prevent damage.
- Refer to the instrument owner's manual to connect the sensor to the instrument.

Checking for Leaks

When the boat is placed in the water, **immediately** check around the thru-hull sensor for leaks. Note that very small leaks may not be readily observed. *Do not leave the boat in the water for more than 3 hours before checking it again.* If there is a small leak, there may be considerable bilge water accumulation after 24 hours. If a leak is observed, repeat "Bedding" and "Installing" **immediately** (see page 2).

Installation in a Cored Fiberglass Hull

CAUTION: Completely seal the hull to prevent water seepage into the core.

The core (wood or foam) must be cut and sealed carefully. The core must be protected from water seepage, and the hull must be reinforced to prevent it from crushing under the hull nut allowing the housing to become loose.

- Drill a 3mm or 1/8" pilot hole from inside the hull. If there is a rib, strut or other hull irregularity near the selected mounting location, drill from the outside. (If the hole is drilled in the wrong location,

drill a second hole in a better location. Apply masking tape to the outside of the hull over the incorrect hole and fill it with epoxy.)

- Using a 51 mm or 2" hole saw, cut the hole from outside the hull through the *outer skin* only (see Figure 4).
 - From inside the hull, use a 60mm or 2-3/8" hole saw to cut through the *inner skin* and most of the core. The core material can be very soft. Apply only light pressure to the hole saw after cutting through the inner skin to avoid accidentally cutting the *outer skin*.
 - Remove the plug of core material so the *inside* of the outer skin and the inner core of the hull is fully exposed. Sand and clean the inner skin, core, and the outer skin around the hole.
 - If you are skilled with fiberglass, saturate a layer of fiberglass cloth with a suitable resin and lay it inside the hole to seal and strengthen the core. Add layers until the hole is the correct diameter.
- Alternatively, a hollow or solid cylinder of the correct diameter can be coated with wax and taped in place. Fill the gap between the cylinder and hull with casting epoxy. After the epoxy has set, remove the cylinder.
- Sand and clean the area around the hole, inside and outside, to ensure that the sealant will adhere properly to the hull. If there is any petroleum residue inside the hull, remove it with either mild household detergent or a weak solvent (alcohol) before sanding.
 - Proceed with "Bedding" and "Installing" on page 2.

Operation & Maintenance

CAUTION: Do not remove the screws on the top of the sensor. To remove the insert, unscrew the cap nut. This will jack the insert up. Then remove the cap nut and insert as a single unit.


How the Valve Works

The valve is not a watertight seal! The sensor incorporates a self-closing valve which minimizes the flow of water into the vessel when the paddlewheel/temperature insert is removed. The curved flap valve is activated by both a spring and water pressure. Water pushes the flap valve upward to block the opening, so there is no gush of water into the boat (see Figures 1 and 5). *Always install the paddlewheel insert or blanking plug secured with the safety wire for a watertight seal.*

Using the Blanking Plug

To protect the paddlewheel insert, use the blanking plug:

- When the boat will be kept in salt water for more than a week.
- When the boat will be removed from the water.
- When aquatic growth build-up on the paddlewheel is suspected due to inaccurate readings from the instrument.

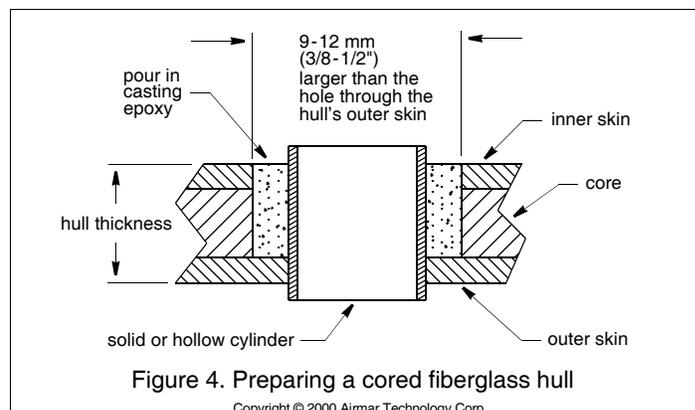

1. Inspect the O-rings on the blanking plug (replace if necessary) and lubricate them with the silicone lubricant supplied or petroleum jelly (Vaseline®) (see Figure 3). The O-rings must be intact and well lubricated for a watertight seal.
2. Remove the safety wire from the cap nut (see Figure 2).
3. To remove the paddlewheel insert from the housing, unscrew the cap nut. This will jack the insert out of the housing. *Do not unscrew the screws.* Replace the paddlewheel insert with the blanking plug. Seat it into place with a pushing twisting motion until the key fits into the notch in the housing. Screw the cap nut in place and **hand tighten only**. Do not over tighten (see Figure 5).
NOTE: If the flap valves do not move freely and block the blanking plug from being inserted, clean the valve assembly so the flap valves move freely and rest against the valve housing. In the unlikely event that the flap valves cannot be freed, you may need to push the flap valves down or break them off.
4. Reattach the safety wire to the cap nut to prevent the insert from backing out in the unlikely event that the cap nut fails or is screwed on incorrectly (see Figure 2).

Winterizing

After the boat has been hauled for winter storage, remove the blanking plug to let the water drain away before re-inserting it. This will prevent any water from freezing around the blanking plug and possibly cracking it.

Servicing the Paddlewheel Insert

Aquatic growth can impede or freeze the paddlewheel's rotation and *must* be removed. Clean the surface using a Scotch-Brite® scour pad and mild household detergent. If fouling is severe, push out the paddlewheel shaft using a spare shaft or a 4D finish nail with a flattened point. Then, lightly wet sand the surface with fine grade wet/dry paper.

The water lubricated paddlewheel bearings have a life of up to 5 years on low-speed boats [less than 10kn (11 MPH)] and 1 year on high-speed vessels. Paddlewheels can fracture and shafts can bend due to impact with water borne objects and mishandling in boat yards. O-rings must be free of abrasions and cuts to ensure a watertight seal. A replacement Paddlewheel Kit 33-350-01 is available.

1. Using the new paddlewheel shaft, push the old shaft out about 6mm (1/4"). With pliers, remove the old shaft (see Figure 5).
2. Place the new paddlewheel in the cavity with the flat side of the blade facing the same direction as the arrow on the insert top.
3. Tap in the new shaft until the ends are flush with the insert.
4. Install one large and one small O-ring.
5. Place the remaining two O-rings in similar positions on the blanking plug.

Sensor Replacement & Parts

The information needed to order a replacement Airmar sensor is printed on the cable tag. Do not remove this tag. When ordering, specify the part number and date. For convenient reference, record this information on the top of page one.

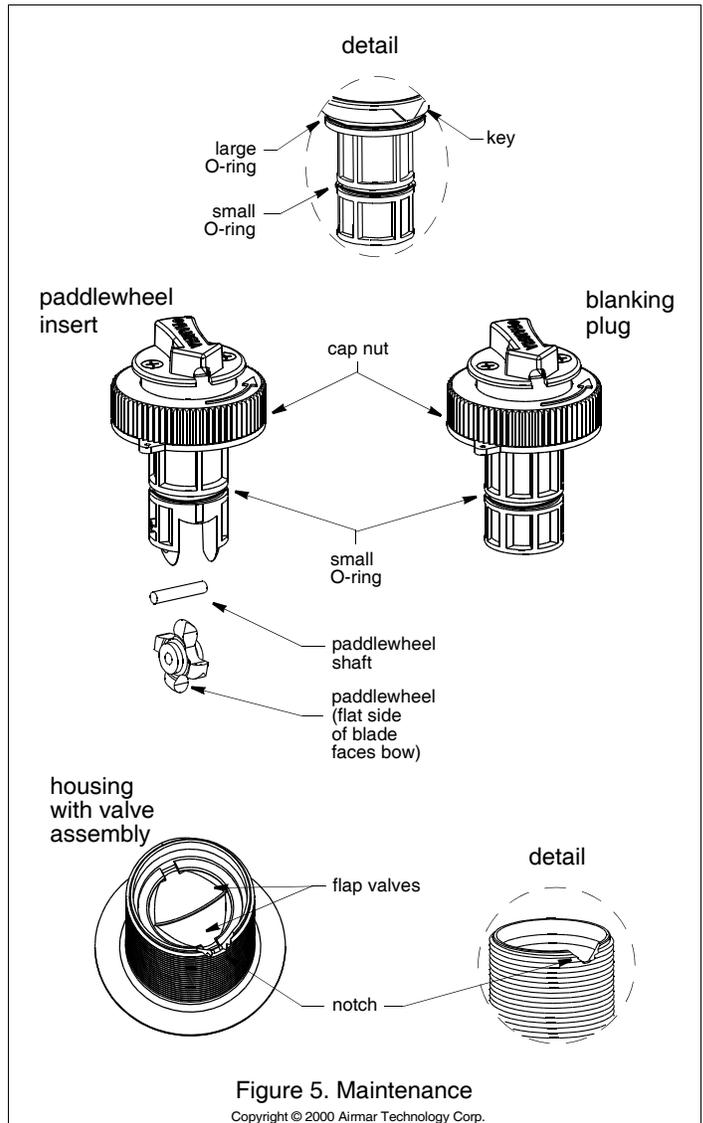


Figure 5. Maintenance

Copyright © 2000 Airmar Technology Corp.

Lost, broken, and worn parts should be replaced immediately.

Part	Airmar Part Number
Blanking Plug	20-288-01
Paddlewheel Kit	33-350-01
Cap Nut	04-011
Hull Nut	04-004
Housing (P371), Valve, and Hull Nut Kit	33-361-01

Obtain parts from your instrument manufacturer or marine dealer.

Gemeco (USA)	Tel: 803.693.0777 Fax: 803.693.0477 Email: sales@gemeco.com
Airmar EMEA (Europe, Middle East, Africa)	Tel: +33.(0)2.23.52.06.48 Fax: +33.(0)2.23.52.06.49 Email: sales@airmar-emea.com